


MASON HD-B LDS Rubber Hanger (All Variants)



Installation Instructions

- Mason HD-B spring hangers are designed to gain a deflection of approximately 10mm at rated capacity.
- Please allow for the rated deflection of the rubber hanger when installing ceiling systems.
- If the rated deflection is not considered, sagging and or damage of the ceiling and surrounding areas may occur.
- Typical drop rod diameter of 10mm. Can accept up to 18mm diameter rod.

Typical Installation Detail

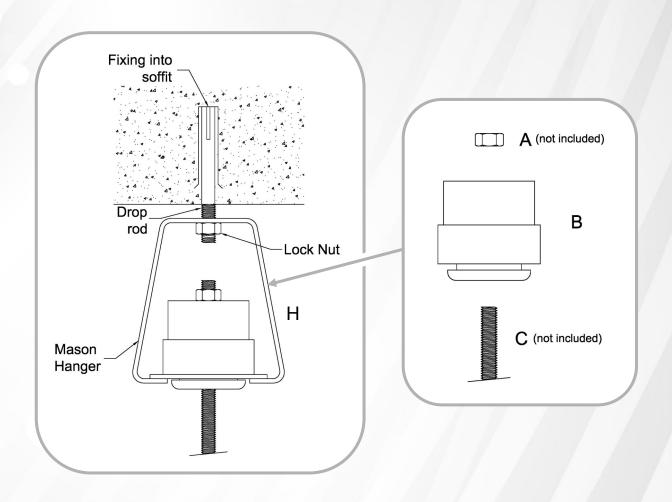

A - Self-locking nut (not supplied)

B - LDS Rubber elementC - Drop rod (not supplied)

H - Mason hanger box

Installation Instructions:

- Fix the top of the drop rod to the soffit, bracket or ceiling joist as required.
- Assemble hanger as above.
- Set all the hangers to the same height by laser or similar method.
- Install the ceiling system in the normal way.