MASON UK LTD
Noise, Vibration &
Thermal Engineering

MASON HD-B LDS Rubber Hanger (All Variants)

Installation Instructions

- Mason HD-B spring hangers are designed to gain a deflection of approximately 10mm at rated capacity.
- Please allow for the rated deflection of the rubber hanger when installing ceiling systems.
- If the rated deflection is not considered, sagging and or damage of the ceiling and surrounding areas may occur.
- Typical drop rod diameter of 10mm. Can accept up to 18mm diameter rod.

Mason UK Ltd, Unit 6, Abbey Business Park, Monks Walk, Farnham, GU9 8HT
Tel: 01252 716610 **Email:** info@masonuk.co.uk **Web:** www.masonuk.co.uk

Typical Installation Detail

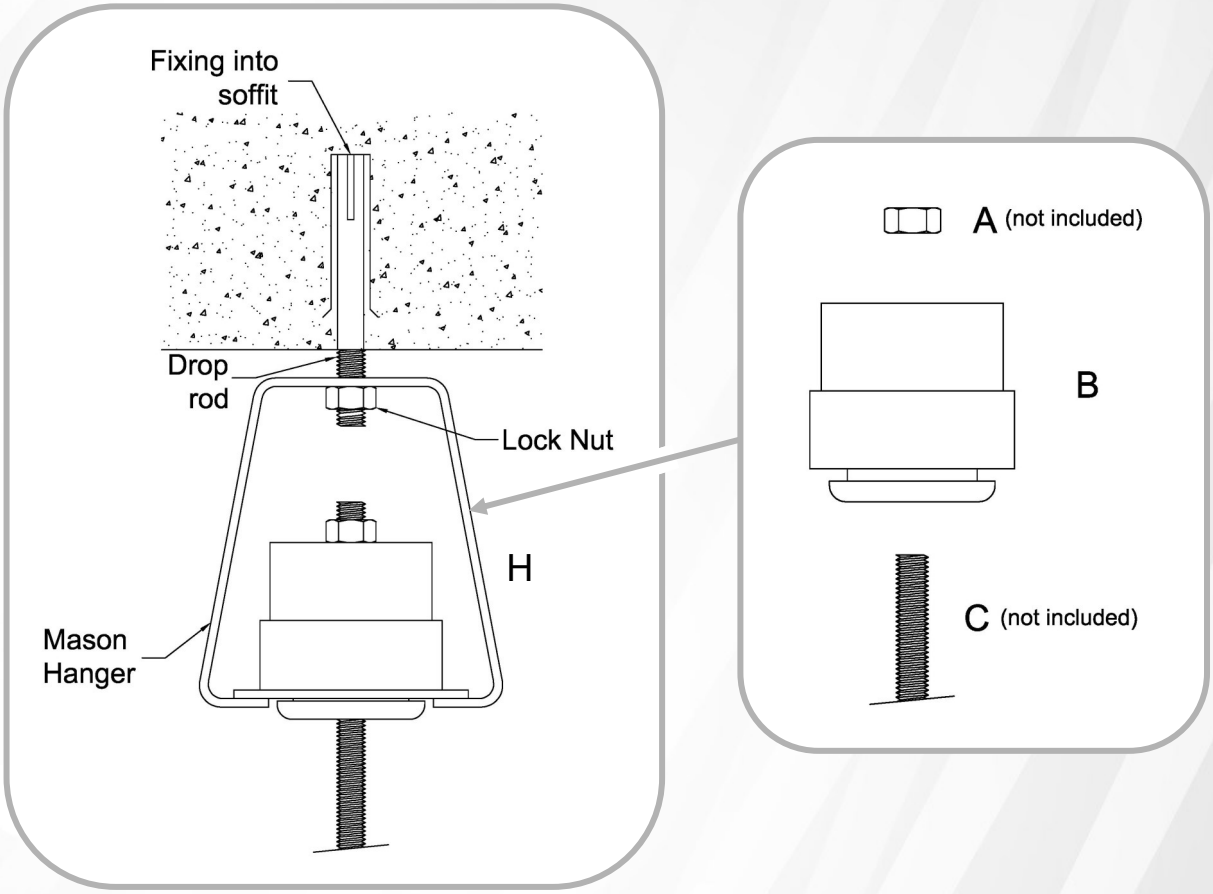

A	-	Self-locking nut (not supplied)
B	-	LDS Rubber element
C	-	Drop rod (not supplied)
H	-	Mason hanger box

Installation Instructions:

- Fix the top of the drop rod to the soffit, bracket or ceiling joist as required.
- Assemble hanger as above.
- Set all the hangers to the same height by laser or similar method.
- Install the ceiling system in the normal way.

Mason UK Ltd, Unit 6, Abbey Business Park, Monks Walk, Farnham, GU9 8HT
Tel: 01252 716610 **Email:** info@masonuk.co.uk **Web:** www.masonuk.co.uk