



MASON U.K.

VIBRATION CONTROL PRODUCTS AND
ACOUSTIC FLOOR SYSTEMS

MASON 30 Series Spring Hanger (25mm Deflection)




Installation Instructions

- Mason 30 series spring hangers can compress up to 25mm at rated capacity.
- Please allow for the compression of the spring hanger when installing ceiling systems.

Mason U.K. Ltd.
Unit 6 Abbey Business Park
Monks Walk
Farnham, Surrey
GU9 8HT

Phone: 01252 716610
Fax: 01252 716630
E-mail: info@mason-uk-co.uk
Web: www.mason-uk.co.uk

Typical Installation for Mason 30 Series Spring Hangers

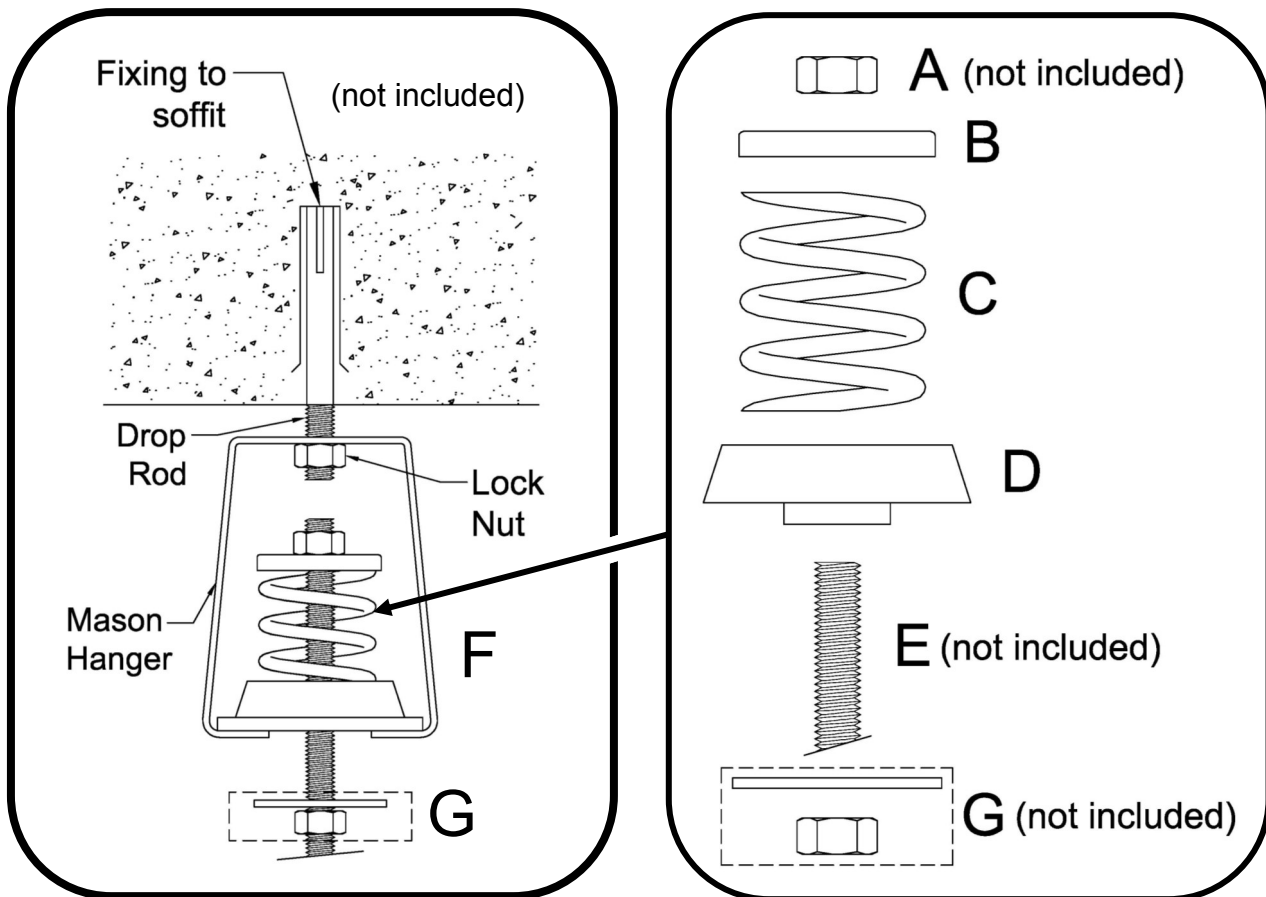

A	-	Self-locking nut (not supplied)
B	-	Metal cup
C	-	Spring element
D	-	Rubber cup
E	-	Drop Rod (not supplied)
F	-	Mason hanger box
G	-	Optional penny washer & nut

Installation instructions:

- Fix the top of the drop rod to the soffit, bracket or ceiling joist as required.
- Assemble the hanger as above.
- If desired, pre-compress spring with large penny washer and nut on underside by a maximum of 10mm.
- Set all the hangers to the same height by laser or similar method.
- Install the ceiling system in the normal way.

Mason U.K. Ltd.
Unit 6 Abbey Business Park
Monks Walk
Farnham, Surrey
GU9 8HT

Phone: 01252 716610
Fax: 01252 716630
E-mail: info@mason-uk.co.uk
Web: www.mason-uk.co.uk